

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



(Comes on)

Slip indicator



Electric power steering system warning light



(Flashes)

Pre-collision system warning light^{*1}



(Blinking and then continuously on)

Tire pressure warning light

Follow the correction procedures.



Open door warning light



Low fuel level warning light



Driver's seat belt reminder light



Brake system warning light (RX450h)



(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

What to do if ...

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"Hybrid SNOW" indicator (RX450h)



Cruise control indicator



Radar cruise control indicator^{*1}



Intuitive parking assist indicator^{*1}



All-wheel drive lock indicator (RX350 AWD models only)



BSM indicator^{*1}



"ECT SNOW" indicator (RX350)



BSM outside rear view mirror indicators^{*1}



"PCS" warning^{*1,2}



"SPORT MODE" indicator (RX450h)



(Flashes)

Slip indicator



VSC off indicator



Eco Driving Indicator Light (RX350)



"ECO MODE" indicator (RX450h)



EV drive mode indicator (RX450h)



"READY" indicator (RX450h)



PASSENGER

SRS airbag on-off indicator^{*1}



AIR BAG ON

SRS airbag on-off indicator^{*1}

For further information, refer to the Owner's Manual.


^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

^{*3}: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.

If the electronic key does not operate properly

Unlocking and locking the doors

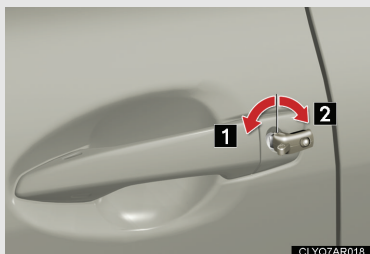

To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the engine (RX350)



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

Starting the hybrid system (RX450h)



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the engine doesn't start (RX350)

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

If the hybrid system doesn't start (RX450h)

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.